

Looftlighter X

The Next Generation Grill- & Fire Starter

In 2006, LOOFT created a legacy with its original Looftlighter starting the trend for superheated air lighters over the world. We are now back at it with the world's first cordless and battery operated fire starter - Looftlighter X

Looftlighter X is built for the ultimate ignition performance. With the same efficiency as the original Looftlighter and the freedom of being cordless, the Looftlighter X provides a level of convenience and ease to lighting that is unmatched.

36v

Li-Ion Technology 1charge

Lights up to 15 times

2h

Charge time



Technical Specifications

Find technical details below

1. On/Off Switch

2. Main Control Board

Control the device with Burn button & Boost button

3. Battery

36V Li-Ion battery pack, 2000mAh

4. Detachable Heat Shield

Detachable heat shield in aluminum

5. Air inlet

6. Battery indicator

7. Charger

Charger features 4.2 ft. /130 cm cord to be rolled up into it

8. Battery release button

Release the battery pressing this button

Power

- 36V Li-Ion Battery | 2000mAh
- Max temp: 1200°F / 650°C
- Charge time 2 hours

Dimensions & Weight

- Length: 17" / 43 cm
- Width: 4" / 10 cm
- Depth: 4" / 10 cm
- Weight: 3 pounds / 1300 gram (inc. battery)



8



 
Automatic Ignition Program

Looftlighter X features an automatic ignition program, helping you to get the most out of your product. Our engineers have optimized the balance between time and energy used during the ignition phase, which helps you light your preferred fuel the fastest way possible, while also economizing battery power.



Get the fire going

The Looftlighter X is the ultimate tool to fire up all kinds of grills, smokers, hearths or fire pits. Which one are you?



Kamado

Since you cannot use lighter fluid in a kamado, Looftlighter X and a kamado really is the perfect match.

Smoker

For the hardcore pitmaster or backyard hero, Looftlighter X fires up your smoker whatever fuel you load into it. You can also adjust heat easily during cooking thanks to the airflow in the Looftlighter X.



Kettle

Tired of uncertain flames and food tasting of chemicals because of lighter fluid? Pour charcoal or briquettes in your kettle and light in a safe and evironmentally friendly way with the Looftlighter X.



Fireplace

Tired of breathing your lungs out to get it going? Smoke entering your living room because of draft not going? Light up your fireplace in style the next time.



Fire pit

Light your fire pit with the Looftlighter X fast, safe and eco-friendly.



Pizza oven

Fire up your pizza oven in 60 seconds and enjoy your slice.

Your Looftlighter X



Fast

The fastest way to get your grill and fireplace ready



Safe

Eliminate harmful lighter fluid and avoid burn accidents



Eco-friendly

No more toxic chemicals and CO2 emissions



Get started

Before your first use with the Looftlighter X, make sure you have charged the battery (full charge takes around 2 hours).

How to charge your Looftlighter X

- **1.** Connect your charger to the outlet
- **2.** Place the Looftlighter X in the charger. When the battery is charging, the white ring around the charger will pulsate. You can choose if you want to charge the battery while attached to the Looftlighter X or if you want to remove it before charge.
- **3.** When the battery is fully charged, the white ring around the charger will change from pulsating to steady your battery is now charged.

Battery indicator

You can check the power level on your battery by pressing the transparent button on the middle of your battery pack. The battery level will be indicated by the lights.



How it works

Learn how the Looftlighter X works

Activate Looftlighter X by pressing the On/Off switch for 2 seconds

The device is now activated and ready to use - It will stay activated for 10 seconds and automatically deactivate if no action is taken during this time.

The Looftlighter X features two buttons – a Burn button a Boost button. Pressing the burn-button initiates an automatic ignition program that is developed to maximize lighting efficiency and minimize power usage.

Automatic Ignition Program



Burn mode - Heating element On

- **A.** During the first 15 seconds the fan speed is set at its lowest. This process builds up heat in the Looftlighter X.
- **B.** After 15 seconds the fan speed will increase.
- **C.** After 60 seconds the heating element is shut off and the fan reaches maximum level (Boost mode)



Boost mode - Heating element Off

After 60 seconds the Looftlighter X goes into Boost mode. The heating element is then automatically shut off and the fan reaches maximum level.

At any time, you can switch between Burn mode or Boost mode.

To end either Burn mode or Boost mode, press the respective button. You can also press the On/Off switch to deactivate the device.

Visit our website at **looftlighter.com** to see instruction videos, tips & tricks and more

How to use it

Follow these instructions to start any grill, smoker or fireplace



1. LIGHT

Make a pile of charcoal, briquettes or logs, touch the pile with the tip and press the Burn button.



2. PULL AWAY

Pull back the Looftlighter a few inches when sparks or glow appear. This will help the heat to spread throughout the pile of fuel.



3. CONTINUE TOWARDS SAME SPOT

Continue aiming the Looftlighter towards the same spot until you have the perfect glow.

General tips

There is charcoal and there is charcoal

We recommended to use high quality lump charcoal. This is quite different from the regular charcoal you pick up in your grocery store. The chunks will be bigger, sparks less and a give a more steady cooking temperature.

Briquettes

If you use briquettes the lighting time might be a bit longer. Briquettes are made from charcoal powder compressed with corn starch making them very dense. The corn starch will also emit smoke when ignited. There are different types of briquettes offering a selection of density. The harder compressed - the longer burn time.

Lighting your hearth or fireplace

Crumble a piece of newspaper and put it between the logs. Touch the paper and press the Burn button. Pull away when flames appear and continue towards the same spot for at least 60 seconds.

PRO TIPS:

Follow these tips get to the next level using your Looftlighter X

Don't choke charcoal

Don't put the nozzle of the Looftlighter X directly on to a big chunk of charcoal - airflow is important so try to find a spot where two pieces of charcoal meet and ignite that spot.

Let it spread

Start by lighting smaller pieces, the glow will catch on quicker and spread to bigger pieces.

Use your ears

Best way to get your charcoal or logs going quickly is to continue pointing the Looftlighter towards the same spot in your pile after ignition. Listen for the "swoosh" and you'll know when you point the Looftlighter X in the right direction.

Boost from outside

You can easily increase the temperature in your grill or smoker by closing the lid, point the tip of the Looftlighter X to the vent hole and press the button. This will add a strong stream of air to your grill which'll get the heat up quickly. Perfect when making pizza!

Check out more tips & tricks online at looftlighter.com

Clean & Care

Wipe off

From time to time we recommend you wipe off your Looftlighter X with a damp cloth. Do not use deturgents.

Store indoors

The Looftlighter X should be stored inside in a dry environment.

Pull it away

Remember to <u>pull away</u> the Looftlighter X from the charcoal or logs when sparks or glow appear. The black heat shield is made out of aluminum (to prevent severe burn damages and setting fire to nearby objects) and can melt if kept in the glow for too long. Also, if you pull away a few inches, the glow will spread even quicker.

Take care of the battery pack

To get the most out of your battery pack and give it a long life, follow these simple tips:

- Try not to drain the battery fully every time. The batteries life length will be affected if they are drained each time. Try instead to recharge the batteries before the product indicates that the batteries are out of power.
- Battery pack might be overheated when placed in the charger If that happens, charging process will start when batteries have cooled down (after around 30 min).

Use the discount code: **LOVEMYLOOFTLIGHTER** to get 30% off on a hard case from our web shop

Accessories

Hard Case - Protect your Looftlighter X

The LOOFT hard case is made to protect your Looftlighter X from outside abuse.



Battery Pack

For the hardcore outdoor enthusiast or for the comfortable backyard hero, an extra battery pack will take your Looftlighter X longer.



Extra Heat Shield

If you use your Looftlighter X frequently, your heat shield can get some wearing and tearing. This doesn't effect the performance of it but if you like to keep it tidy and nice, you can always order a new heat shield and easily exchange it yourself.



Other products







LOOFT t-shirt



Black Trucker Hat

Reach out to us!

Find us on social media





You Tube looft

Looft Industries AB Repslagargatan 15B 118 46 Stockholm Sweden

Phone. +46 20 00 95 info@looftindustries.com

Looft Industries LLC 106 20th Street Butner, NC 27509 United States

Phone. 855 905 6638 info@looftindustries.com

HDR av



Warranty Information

We stand behind our products with confidence which is why we always offer a minimum three-year warranty as a standard.

- Warranty applies only to the original owner.
- Normal wear and tear is not warrantied.

Join the community – get the latest news and updates.

looftlighter.com/pages/register



LOOFT®

LOOFT 2004 Looft Industries AB Designed in Sweden, Assembled in China.

Phone. 855 905 6638 info@looftindustries.com

Product of Sweden

looftlighter.com